



17 VALVE HEAT SHIELD REPLACEMENT INSTRUCTIONS

Model# HS-35

INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.



This heat shield is for replacement on 17 valve models. To install, follow the steps below:

1. Remove the old/existing **valve** heat shield (from the valve).

Note: DO NOT remove the existing regulator heat shield (if equipped).

2. Cover the valve with the heat shield as shown in Fig.1-1 and Fig.1-2.

Refer to the owner's manual supplied with your burner/valve system for all other product details.

TO PREVENT VALVE DAMAGE AND FAILURE:

IT IS CRITICAL THAT THE HEAT SHIELD BE PLACED CORRECTLY OVER THE VALVE PRIOR TO OPERATION.

KEEP LAVA GRANULES/COALS, SAND/VERMICULITE, EMBERS/GLASS, AND ALL FOREIGN OBJECTS AWAY FROM THE PILOT ASSEMBLY, VALVE ASSEMBLY, AND HEAT SHIELD DURING MEDIA PLACEMENT AND AT ALL TIMES.

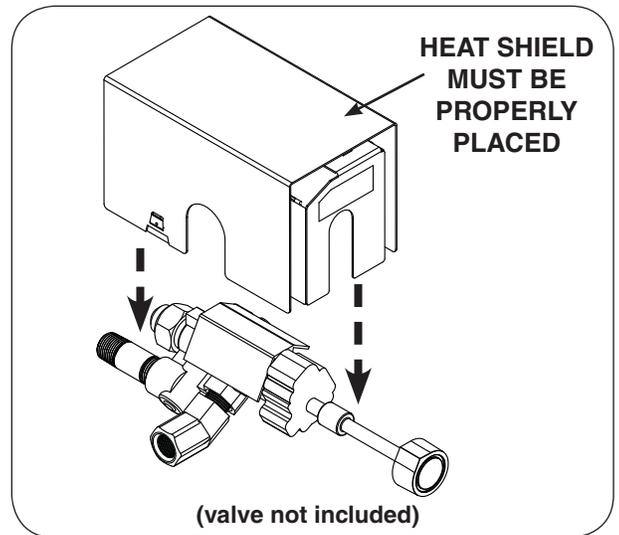


Fig. 1-1

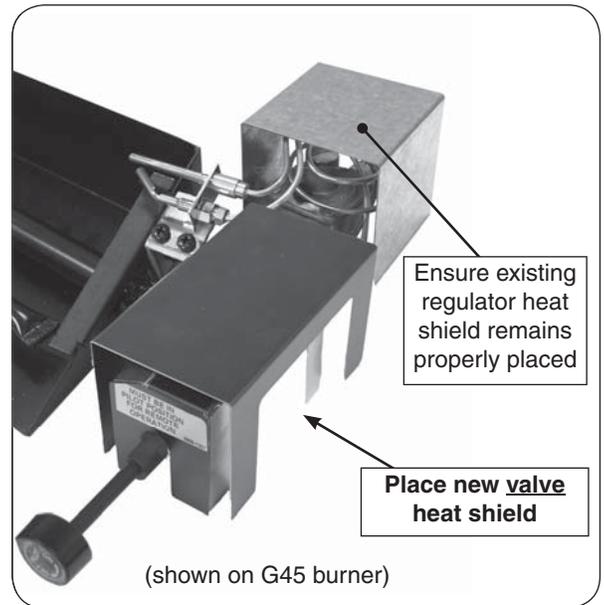


Fig. 1-2