




Model Numbers: BSASL25-1, BSASL32-1, BSASL40-1

BEFORE GETTING STARTED

Unpack and lay out all of the included parts. The stainless-steel pieces come in a protective soft cover. Remove the covers and take care with stainless steel components as to not scratch them during the assembly process.



OVERVIEW - COMPLETED ASSEMBLY

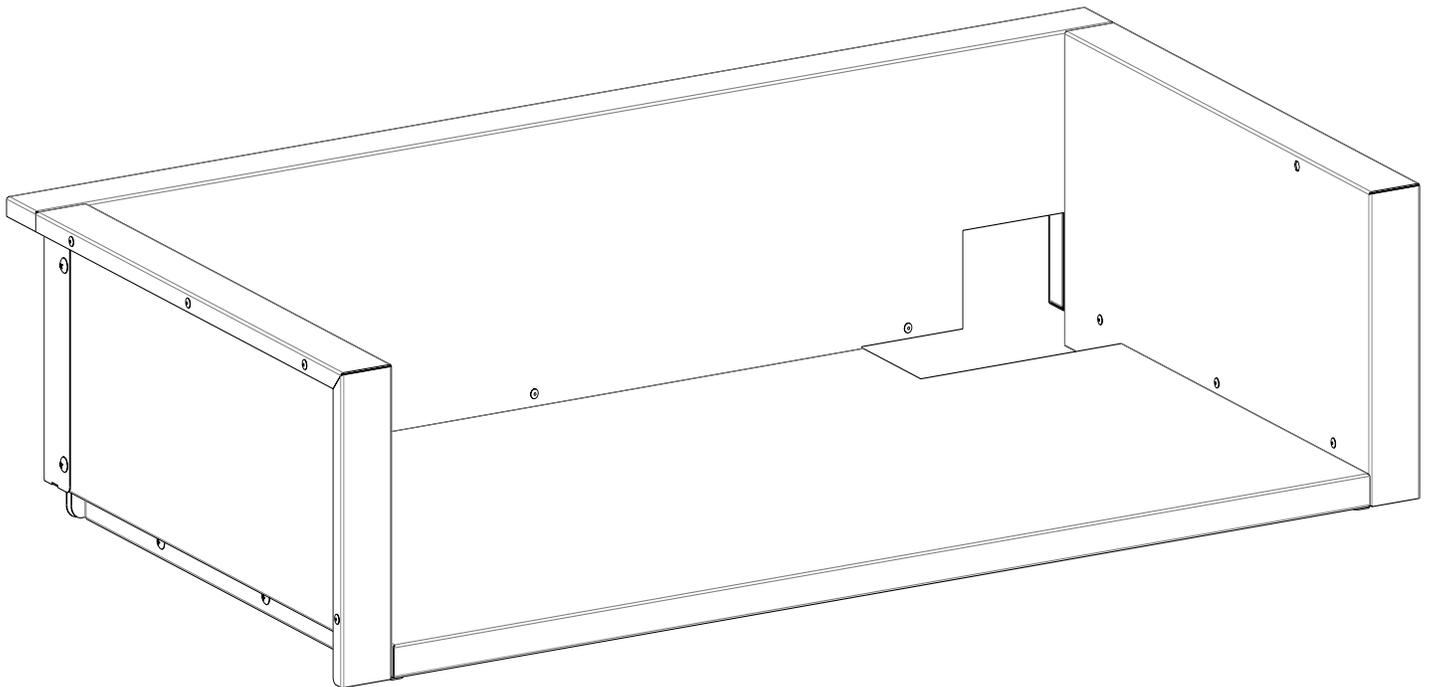


25" | 32" | 40" INSULATED SLEEVE ASSEMBLY

Hardware And Parts List:

- **M5X12 SCREWS: QTY = 18**
- **PHILLIPS HEAD SCREWDRIVER**

Item No.	Description	Part Number		
		BSASL25	BSASL32	BSASL40
1	Left Panel	BR0263	BR0263	BR0263
2	Right Panel	BR0264	BR0264	BR0264

Item No.	Description	Part Number		
		BSASL25	BSASL32	BSASL40
3	Bottom Panel	BR0416	BR0265	BR0266
4	Back Panel	BR0417	BR0267	BR0268


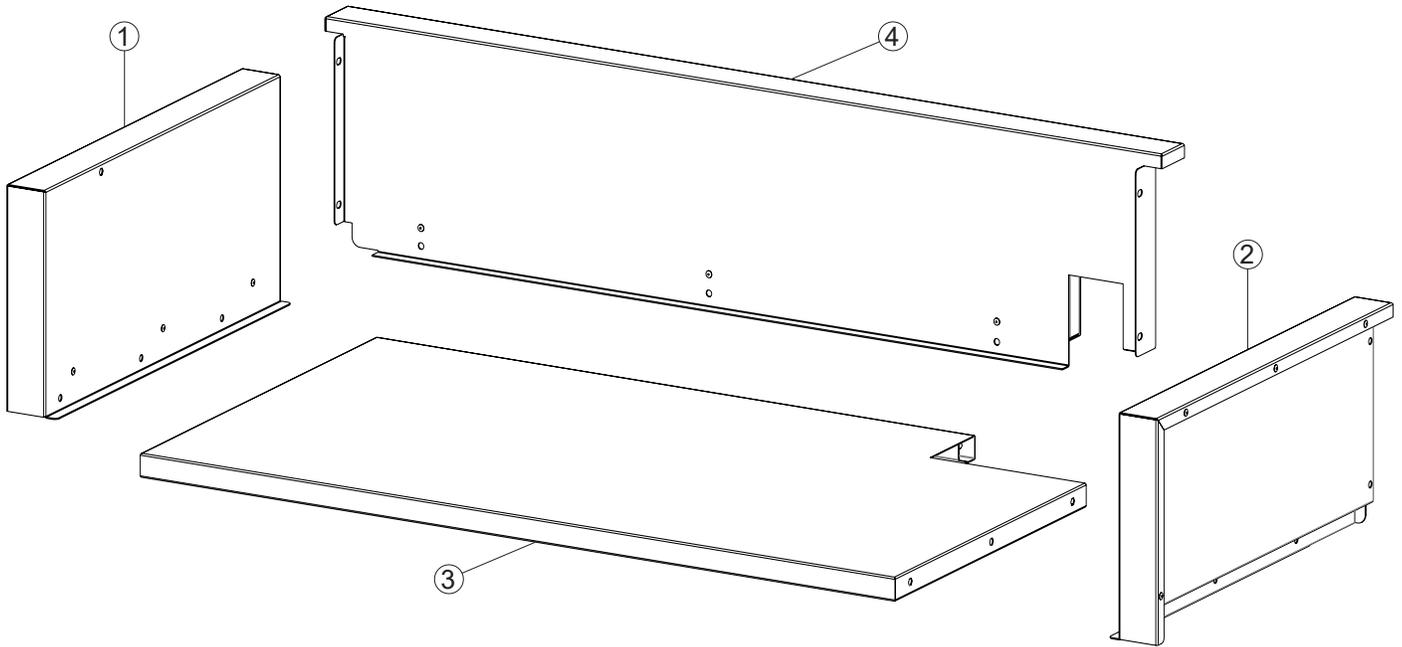


Overall Dimensions

Model #	Cutout A	Cutout B	Cutout C	Cutout D	Cutout E	Cutout F	Cutout G
BSASL25	27-7/16"	9-3/4"	23-1/2"	8-3/8"	4"	7-7/8"	3"
BSASL32	35-1/8"	9-3/4"	31-3/16"	8-3/8"	4"	7-7/8"	3"
BSASL40	42-1/16"	9-3/4"	38-1/8"	8-3/8"	4"	7-7/8"	3"

Model #	Cutout H	Cutout I	Cutout J	Cutout K	Cutout L	Cutout M	Cutout N
BSASL25	3-15/16"	20-11/16"	22-11/16"	25-15/16"	21-1/8"	8-13/16"	21-5/8"
BSASL32	3-15/16"	20-11/16"	22-11/16"	33-5/8"	21-1/8"	8-13/16"	21-5/8"
BSASL40	3-15/16"	20-11/16"	22-11/16"	40-1/2"	21-1/8"	8-13/16"	21-5/8"


***DIMENSION INCLUDES THE SCREWS USED TO ATTACH THE INSULATED SLEEVE'S REAR PANEL.**

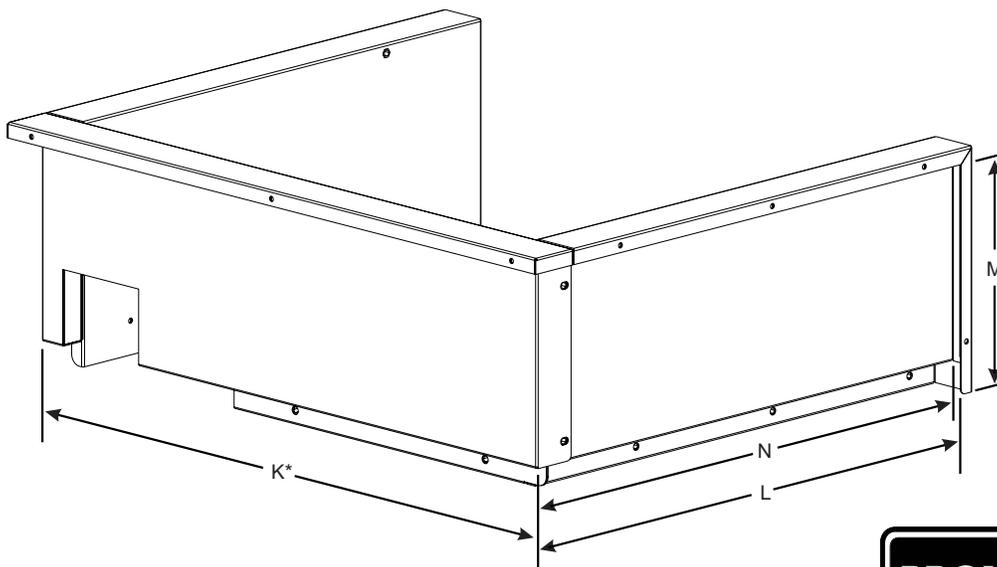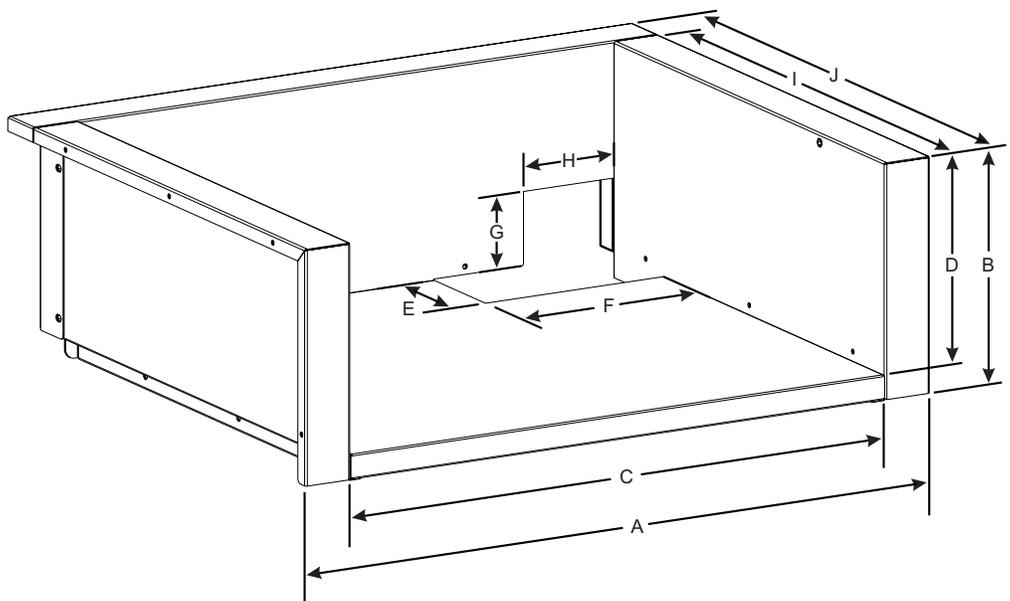

Left Panel Assembly To Bottom


STEP 1A:

Attach left and right side panel Assemblies (1A & 1B) to the bottom panel using (3) screws each.

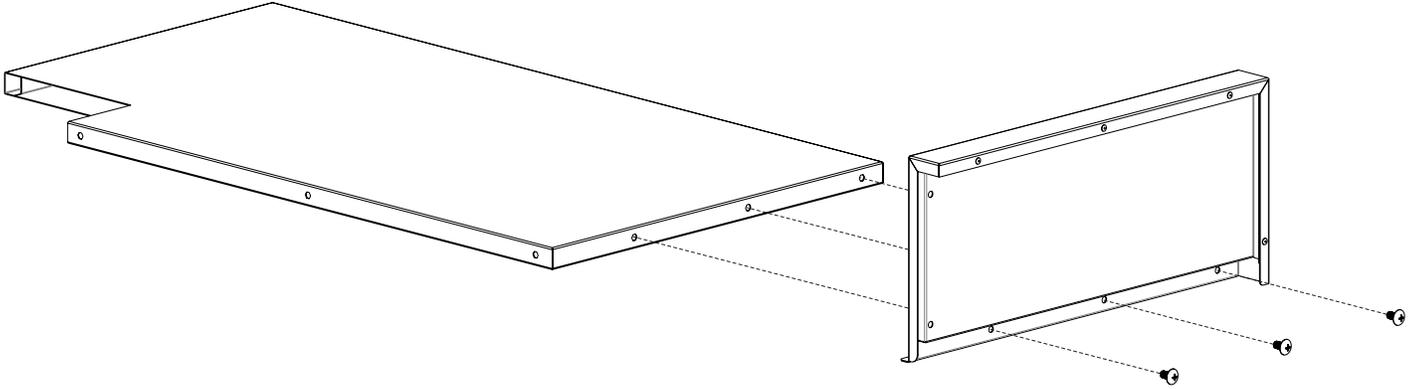

Right Panel Assembly To Bottom


STEP 1B:

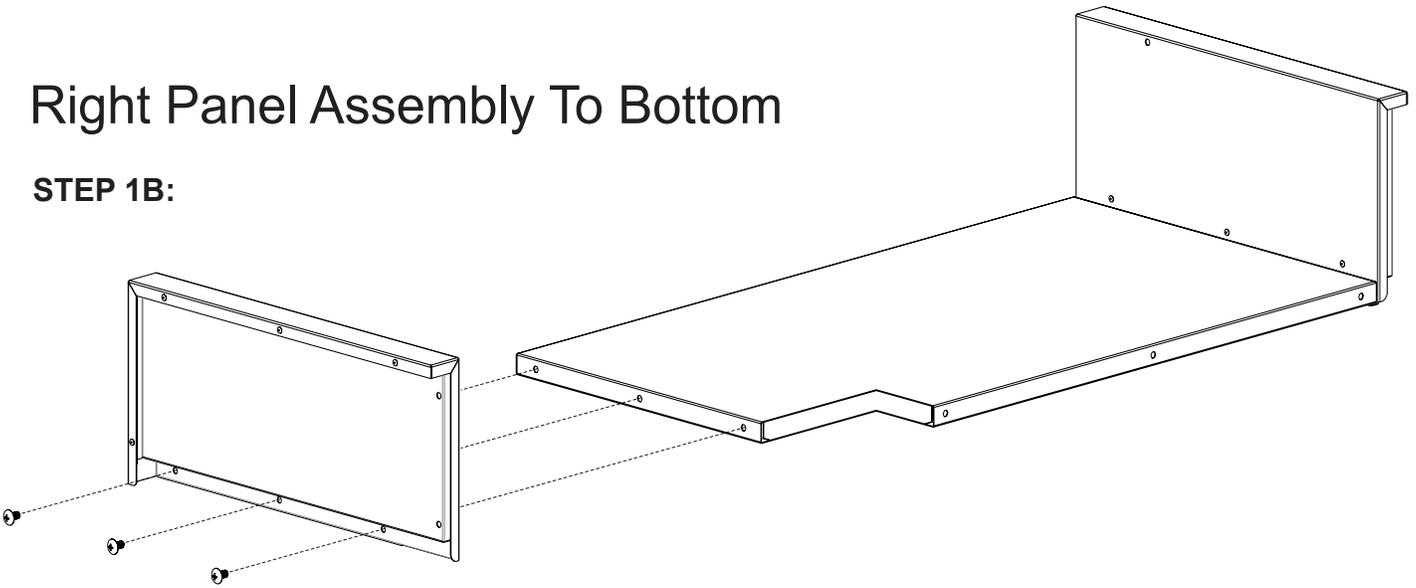

Rear Panel Assembly To Left, Right, & Bottom Assemblies

STEP 2:


For BSASL25 sleeves, attach rear panel assembly using (6) screws: (2) each for the sides and (2) for the bottom. For BSASL(32,40) sleeves, attach rear panel assembly using (7) screws. (2) each for the sides and (3) for the bottom.

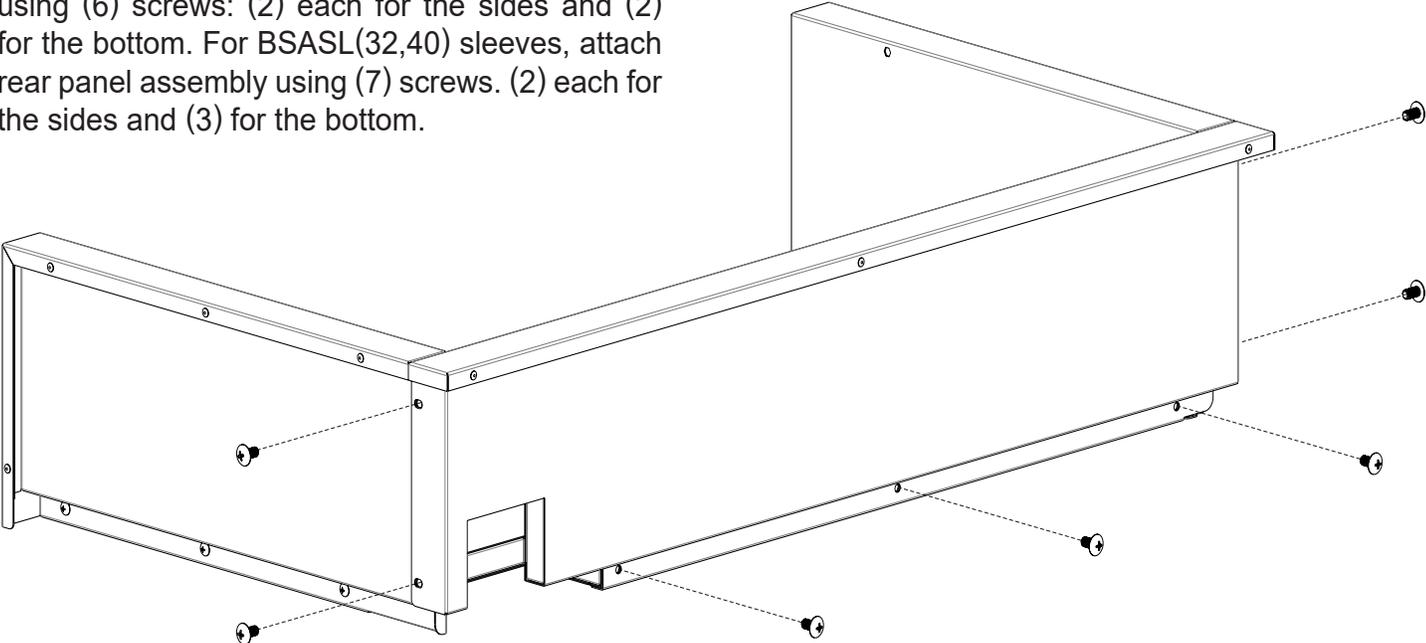

Installation Complete.

STEP 3:

Place assembled sleeve into the cutout. Refer to the grill manual for cutout dimensions.

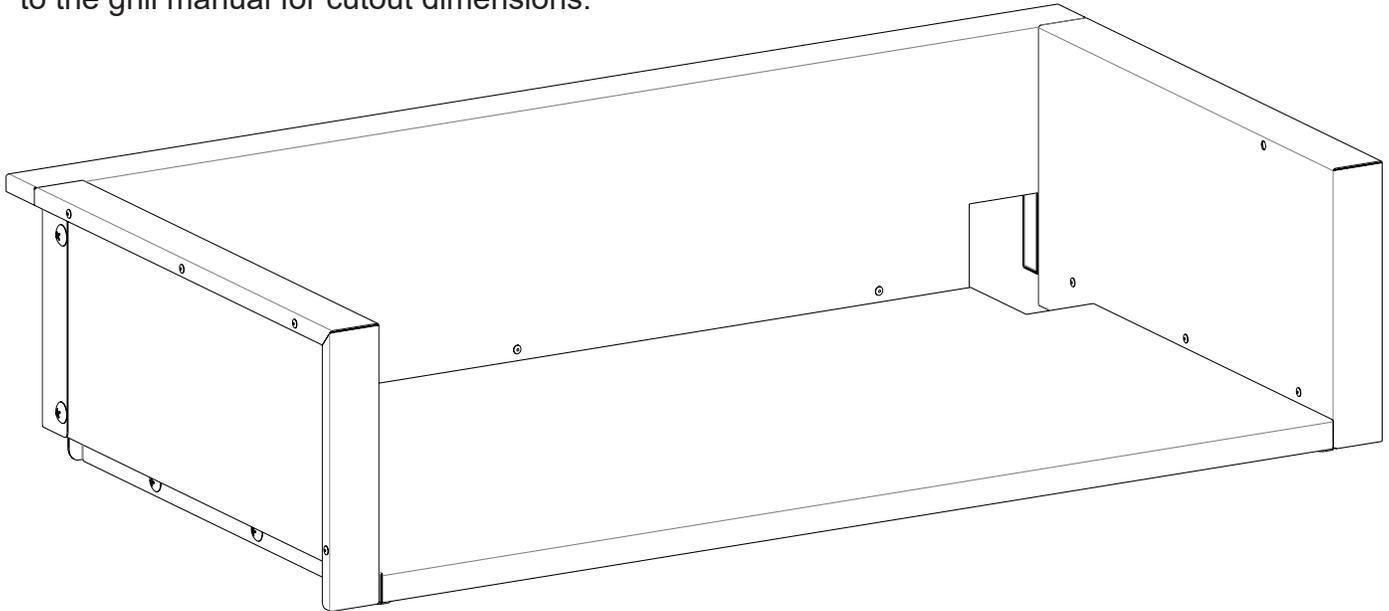

Installation Of Sleeve Is Now Complete.

To install the grill into the sleeve, lift and place into the sleeve. The grill has two holes. One on each side. These two holes should line up with the holes in the left and right panel sleeve. Slide grill back. Once the holes are lined up, secure grill to sleeve using (1) screw each.



(GRILL) - LEFT HAND SIDE



(GRILL) - RIGHT HAND SIDE





BROILMASTER

A Division of Empire Comfort Systems, Inc.

Visit our web site at www.broilmaster.com

If you have a general question about
our products, please e-mail us
at info@empirecomfort.com.

If you have a service or repair question,
please contact your dealer.